

TREASURE COVE
TC-1006 QUICK TUNING INSTRUCTIONS

When you pull the detector out of the box, the VOLUME Knob, TUNE knob, and DISC knob should all be rotated counter-clockwise to the farthest left position.

This is a sensitive device. TUNING should NOT be done indoors or near any large metal objects.

STEP 1

Turn TUNE knob clockwise to the midpoint (about 5 dots)

Turn DISC (Discrimination) knob clockwise to the midpoint (about 5 dots)

Turn on detector (VOLUME knob) and turn clockwise to the position marked by "DOT 5"

NOTE: At this point the detector is not tuned and will only pick up large objects.

STEP 2

Push the red button down and hold. (The detector will emit a fairly loud buzzing sound.) Keep holding down the button and with other hand slowly turn the TUNE knob right or left until meter needle is at "0". RELEASE RED BUTTON.

NOTE: At this point the detector will STILL emit a loud buzzing sound.

STEP 3

Turn VOLUME counterclockwise (left) SLOWLY until it is set at dot 2-3. The buzzing sound should be fairly faint or even gone.

NOTE: If you sweep the detector over large metal objects, the buzzing sound should come back and fairly loudly.

STEP 4

Set the discrimination to the type of object you want to find.

If you want to detect all metal, turn the DISC knob counterclockwise all the way to far left and then PRESS THE RED BUTTON ONCE AND RELEASE. Your detector is now tuned for all metals.

If you want to filter metals and only find nickel size objects, hold the detector over a nickel until the detector makes a buzzing sound and PRESS THE RED BUTTON ONCE AND RELEASE.

If you ONLY want to detect more valuable metals, then the DISC knob should be tuned more to the right. WARNING: If you turn the knob TOO far to the right you will NOT detect anything.

NOTE: After the detector has been tuned, if you adjust the VOLUME or the DISC knobs, you will once again need to PRESS THE RED BUTTON ONCE AND RELEASE.